

MK7 Cruise Control Retrofit Compatibility Check

Please note: This is based on limited research and it no way guarantees that cruise control is suited for your vehicle. This guide is subject to change at any time as further information becomes available.

Tools required:

- T20 Torx screwdriver
1. Turn the steering wheel until your volume controls are at the bottom and you have access to the screw on the left-hand side. Remove this screw.



2. Now turn the steering wheel until the volume controls are at the top and you have access to the screw on the right-hand side. Remove this screw.



3. Lift up the top section



4. Underneath the steering column remove the third screw and release the height adjuster (steering wheel should now move up/down & back/forth)




5. Pull both sides of the lower section outwards and down at the same time taking care to guide it over the ignition barrel (remove your key first)



6. On the left-hand side behind the steering wheel you should see the plug & wiring loom pictured below



7. Now check to confirm the first 2 cables (from the left) are present in the plug. They should be white, and then green/brown.

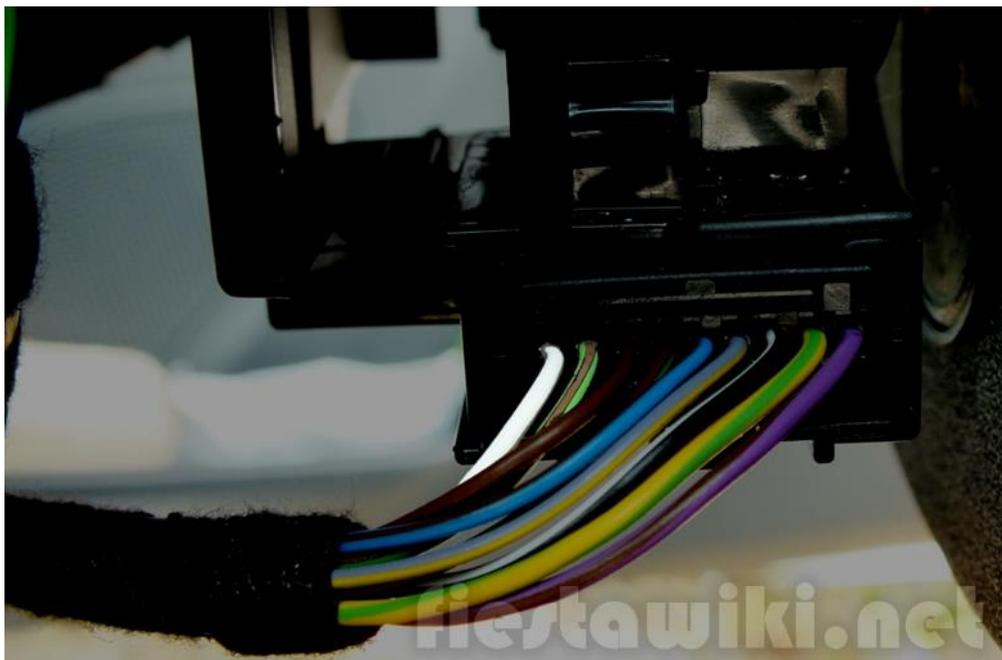

If the cables are missing from the plug on your vehicle, at present, we do not believe cruise control is compatible. This seems to affect petrol engines prior to 2010.

If these wires are present our initial investigation shows your vehicle has a higher likelihood of the upgrade succeeding, though this is not guaranteed.

If you have any questions please contact me on cruise@nath.so